
	8 7 6 5 4
	NOTE
F	<ol> <li>THIS UNIT <b>MUST</b> BE FASTENET TO THE VEHICLE</li> <li>USE 3/8 HARDWARE (NOT INCLUDED) TO MOUNT THE UNIT</li> <li>USE MOUNTING TEMPLATE IN THE SYSTEM SHIPPING BOX TO LOCATE MOUNTING HOLES.</li> </ol>
_	
E	
D	
_	
С	
_	6X 3/8 WASH 3/8 BOLT
Β	
A	
	8 7 6 5 4

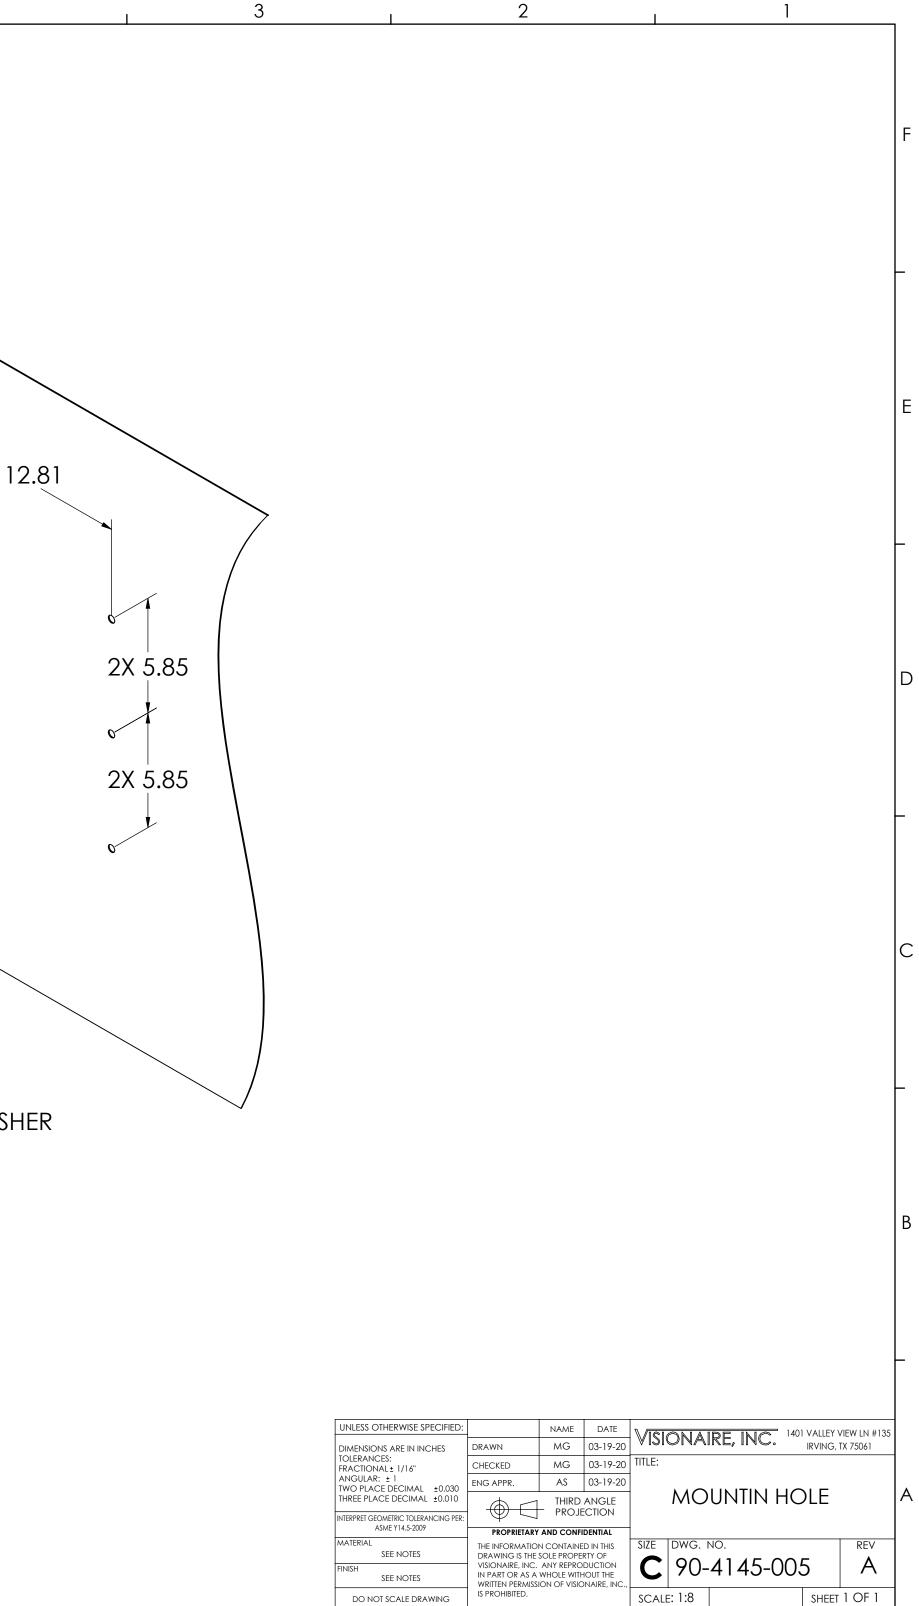

3

DO NOT SCALE DRAWING

2

sheet 1 OF 1

scale: 1:8